


EZDOWN Kit
Installation Instructions

**FORD F-150
2004-Present**



Kit Components
Kit Components

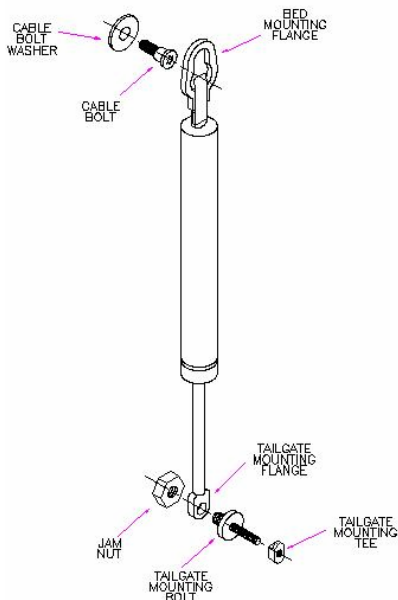

Package should include:

Comp.	P/N	Qty
Damper	8357WF	1
Foam	P2152XH	1
Washer	P2153XC	1
Cable Tie	P2147XP	1
Tee Nut	P2154XY	1
TGM Bolt	P2156XO	1
Cable Bolt	P2157XJ	1
Self Locking Nut	P2155XT	1
Shrink Sleeve	P2161XG	1
3mm Wrench	P2151XM	1
T40 Wrench	P2149XF	1
T50 Wrench	P2148XK	1
Instruction Sheet	P2158XE	1



The smoothest way to lower your tailgate

Visit our website for a **video guide to installing the damper**. It's EZ, just go to www.ezdown.com and click on **INSTALL VIDEO**.

The proceeding is not a warranty. If you have specific warranty questions, contact your dealer for warranty information and limitations, or visit www.ezdown.com. **QUESTIONS?** Visit our web site at www.ezdown.com or call 52.844.411-0776

Step 1: Remove Safety Cable

Open tailgate. Remove the safety cable's mounting flange from the truck bed's cable bolt (**DRIVER SIDE ONLY**). Do **NOT** remove safety cable from the *tailgate's* cable-mounting bolt.




Step 2: Replace Cable Bolt

Remove cable bolt and washer from truck bed's side panel using provided Torx T50 wrench.



Slide new cable bolt washer onto the threaded end of the new cable bolt. Insert new bolt into truck's bedside panel and tighten cable bolt with Torx T40 wrench.

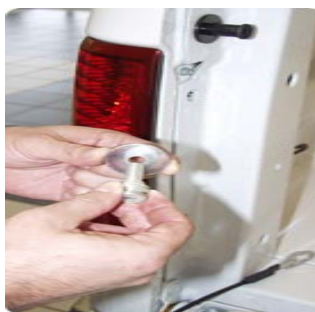

Step 3: Attach Safety Cable

Slide heat shrink sleeve over the removed end of the safety cable and then re-attach safety cable to the newly installed cable bolt. Note: cable mounting flange should rest in groove closest to the truck bed and clip should rest below the groove.





Step 4: Install Tailgate Mounting Tee and Bolt

Thread the tailgate mounting tee onto the tailgate mounting bolt until the back of the mounting tee is flush with the end of the thread. Note: the orientation of the mounting tee shoulder should face on the mounting bolt head.

Locate the pre-existing oblong hole on the tailgate's side wall (driver's side). Angle and insert the tailgate mounting tee so the entire tee nut fits inside the hole. Due to varying paint thickness, the fit may be tight.

Once the mounting tee is in the oblong hole, rotate the tee 90 degrees and align the square shoulder on the mounting tee by pulling towards you. Finger tighten mounting bolt until the round shoulder engages the tailgate. Use included 3mm Allen wrench to tighten tailgate mounting bolt. Do not over tighten because damage to the tailgate mounting bolt may occur.

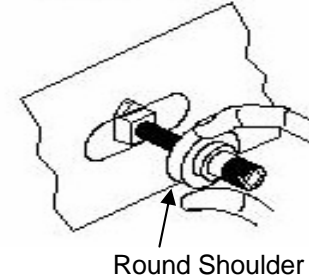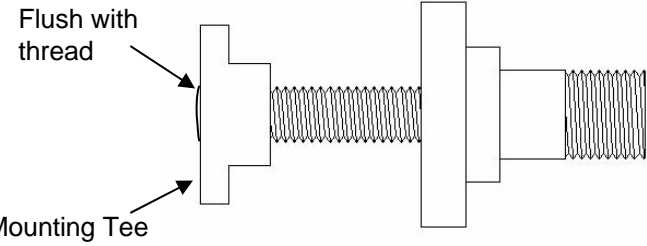

Step 5: Install EZDOWN Tailgate Damper

Install small end of EZDOWN Damper onto the tailgate mounting bolt that was just installed and use jam nut to lock in place. Do not over tighten.

Attach damper mounting flange to the truck bed's cable bolt. Be sure the flange rests in the groove farthest from the truck bed and the clip rests below the groove

Step 6: Remove Safety Cable and Cable travel Limit washer from Tailgate

Remove the safety cable bolt from the driver's side of the tailgate. Remove the cable travel limit washer

Step 7: Attach Safety Cable to Tailgate

Re-attach safety cable to the tailgate without cable travel limit washer. Tighten bolt

